



WMF COFFEE MACHINES

WMF Planning Info Cup rack Bistro Easy Design

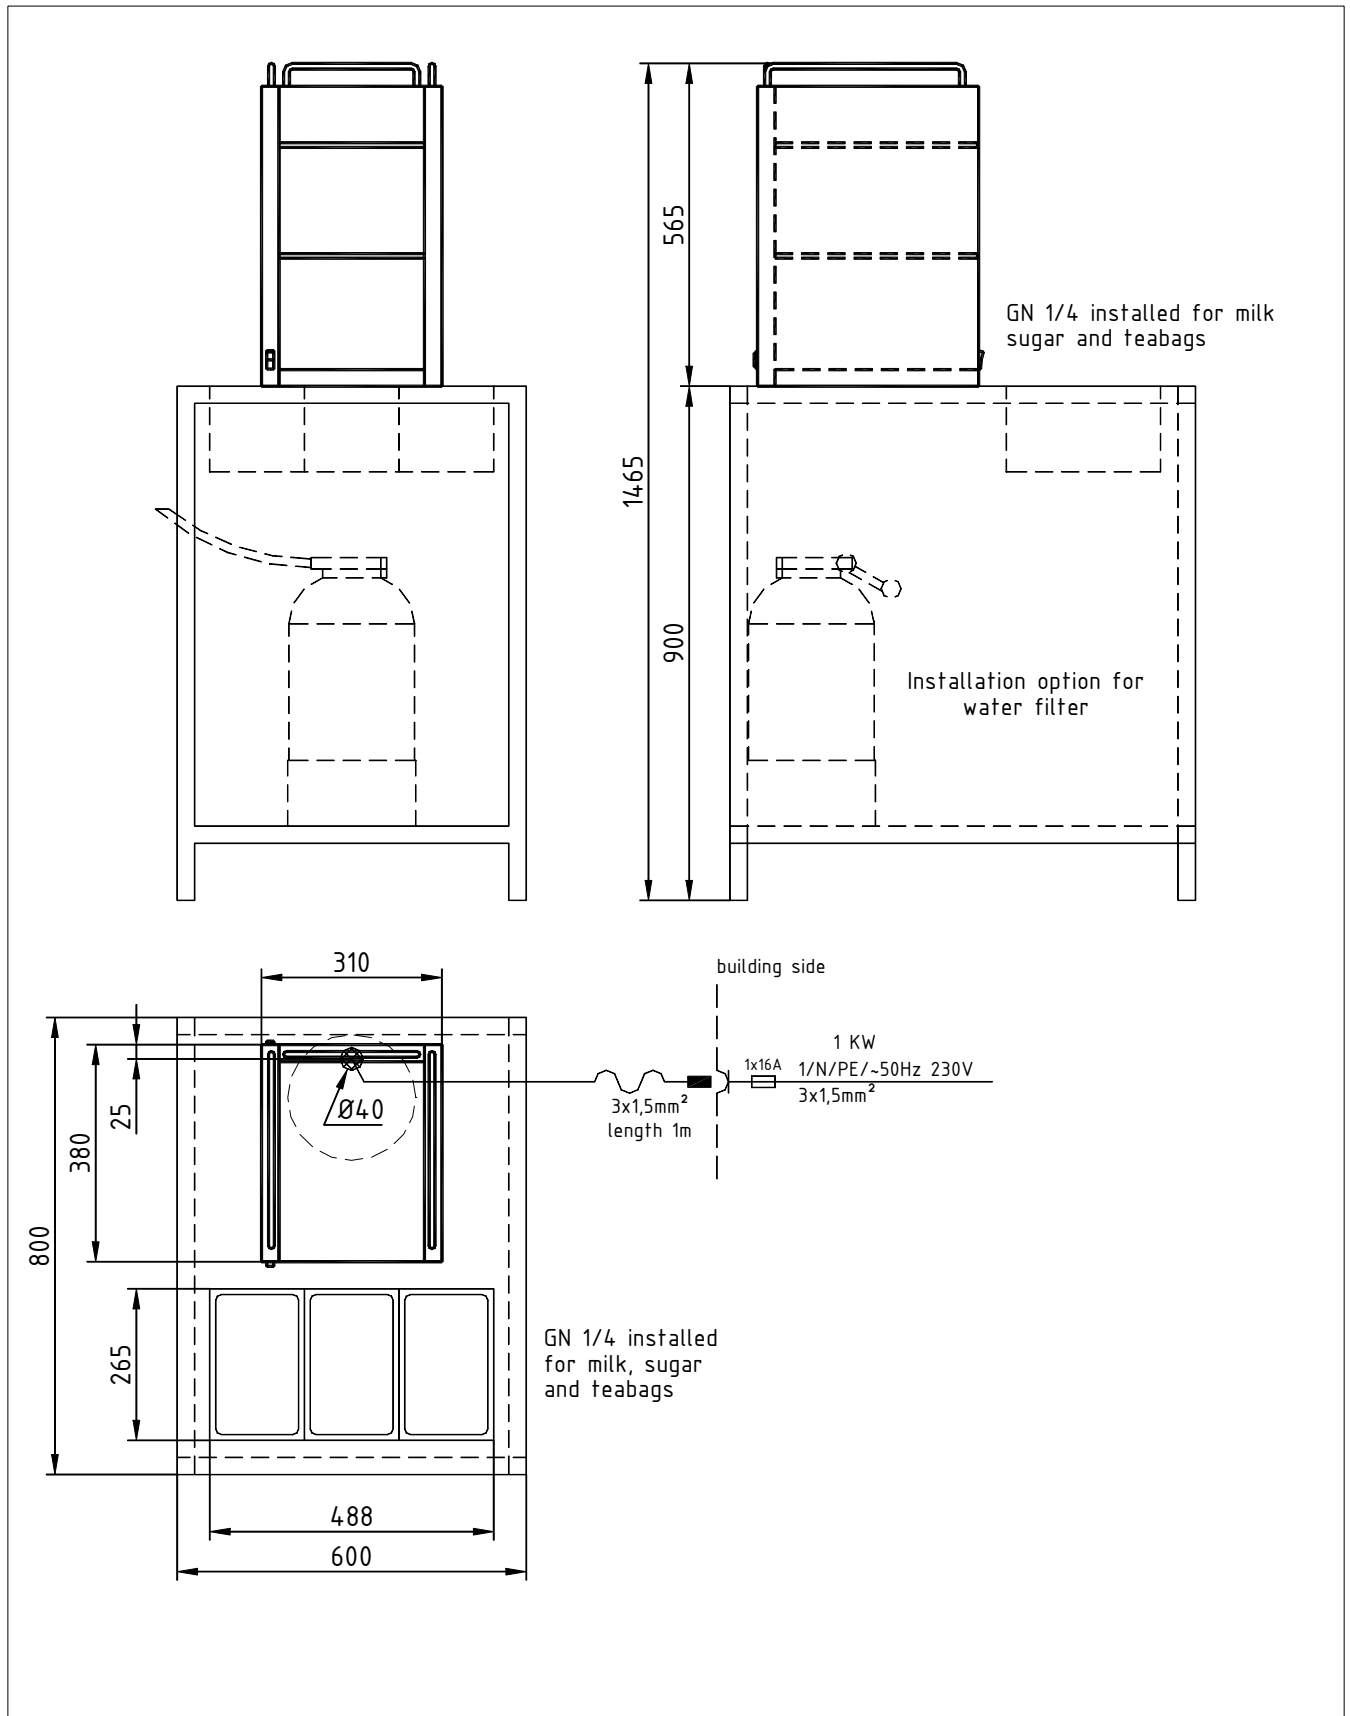

WMF COFFEE MACHINES

WMF Planning Info Auxiliary cooler Bistro-Easy

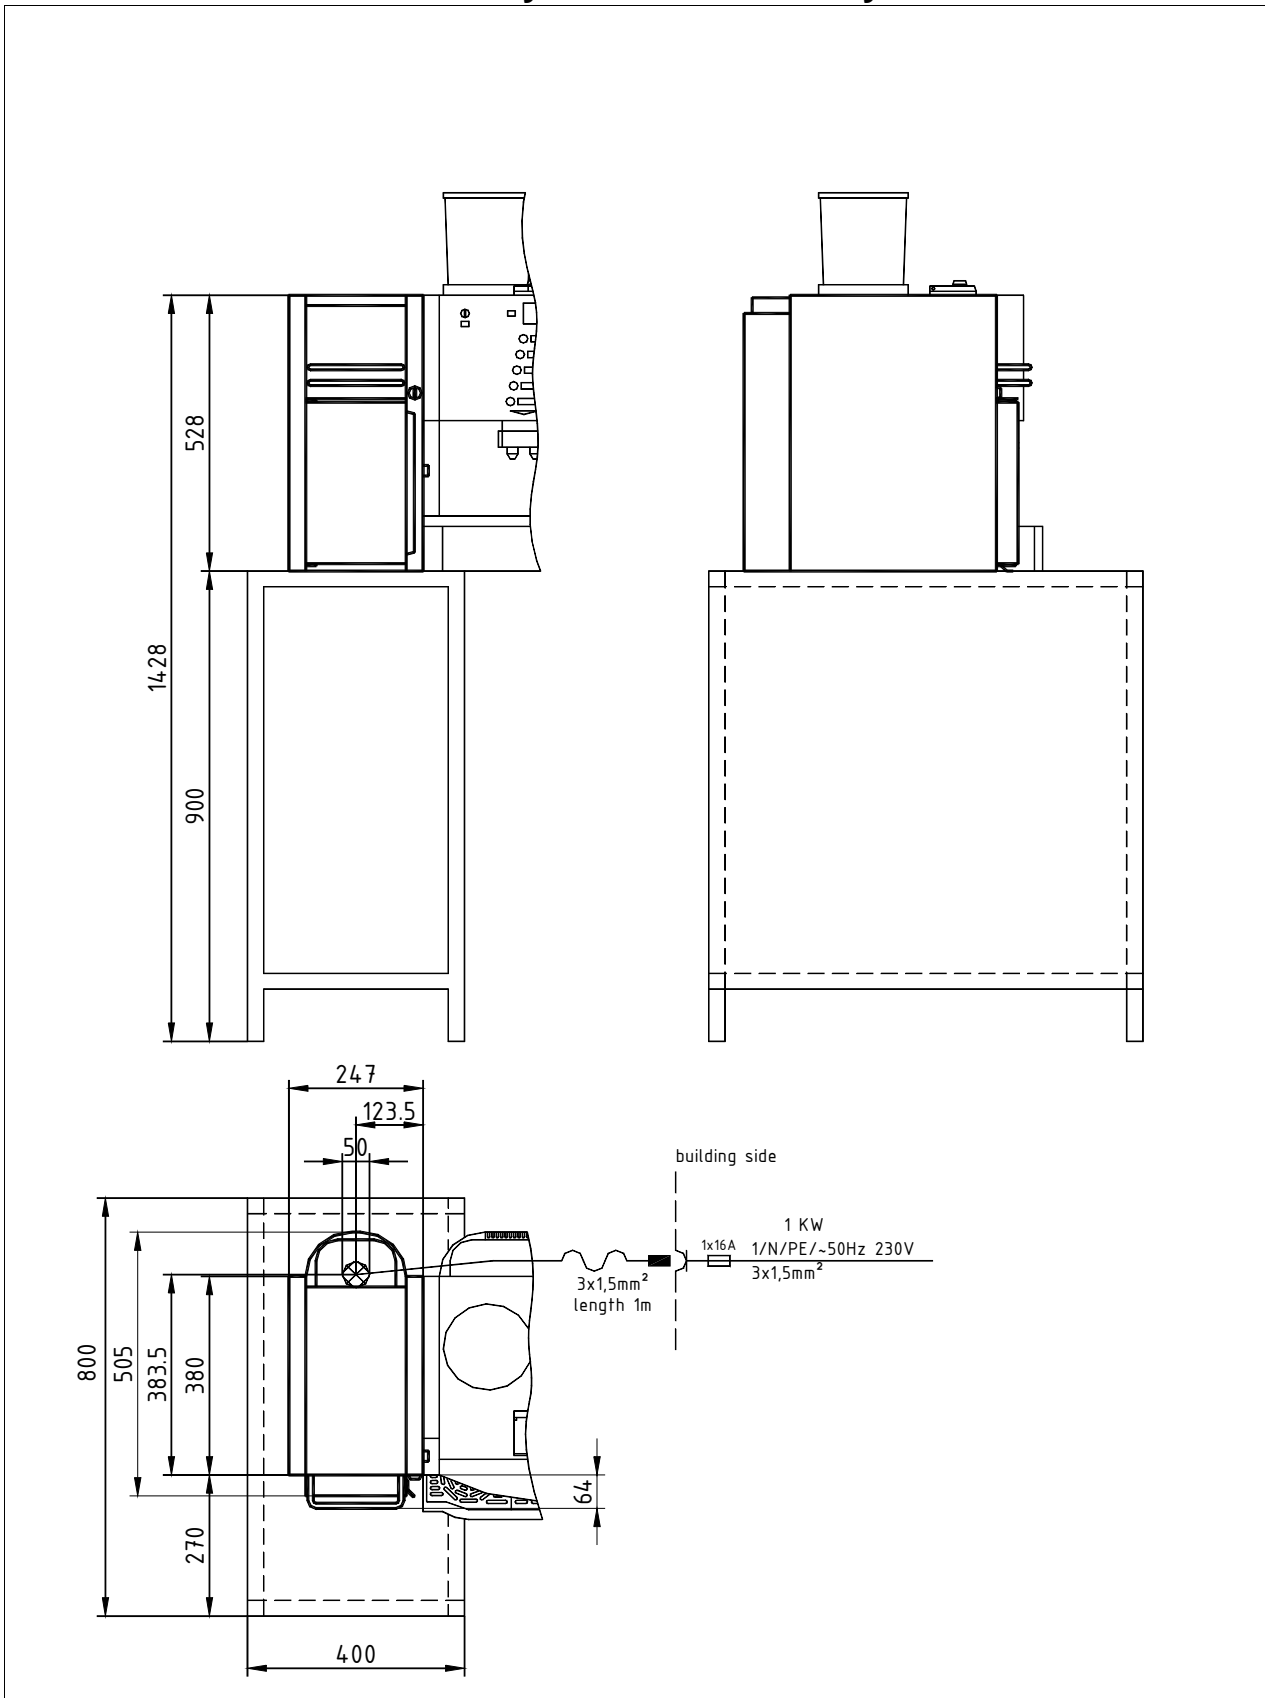


WMF COFFEE MACHINES

Data sheet for Bistro Easy Design accessories

Type:	03 9017 1600 cup rack , 1 / N / 50 Hz, PE, 0.15 kW, fuse protection building 16 A, Bistro Design, Silverline
Capacity:	50 - 80 coffee cups or mugs
Degree of protection:	IPX0
Protection class:	Protection class I
Perceptible heat emission:	0.15 kWh/h in standby mode
Perceptible heat emission:	0.15 kWh/h in maximum mode
Miscellaneous:	3 electrically heated shelves, connecting cable 1.4 m long
Empty weight:	20 kg

Type:	03 9181 1700 Cooler , 1 / N / 50 Hz, PE, 0.07 kW, fuse protection building 16 A, W, Bistro Easy Design
Capacity:	4 L
Degree of protection:	IPX0
Protection class:	Protection class I
Perceptible heat emission:	0.008 kWh/h in maximum mode
Continuous sound pressure level (Lpa)	< 60 dB (A)
Accessories:	milk insert of Cromargan® stainless steel rustproof,
Miscellaneous:	The cooler can only be installed on the left viewed from the server side of the coffee machine. Lockable front doors, no cup rail, connecting cable 1.4 m long
Empty weight:	30 kg
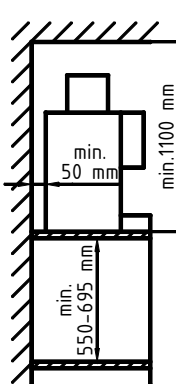
<p>Installation clearances:</p> 	<p>For the installation a minimum clearance of 50 mm to the back wall and at the sides to walls or other non-WMF equipment is required for functional, service and safety reasons.</p> <p>A clear height of 1100 mm from the top of the installation area is required. The height of the installation area from the top of the floor should be at least 700 mm and a maximum of 900 mm.</p> <p>Installation of accessories underneath the unit (such as water filter or sediment separator) requires a clearance of 550 and 695 mm, depending on the configuration and the local installation conditions.</p> <p>If the connections of the machine are down through the counter, please also consider the space required by the connection lines, which may restrict the usable space in the substructure.</p>
--	--

WMF COFFEE MACHINES

Electrical connection:

The following specifications for the electrical connection and the cited standards are applicable for connecting machines in EU countries. If applicable, additional national regulations must be observed. Outside the EU the acceptance of the cited standards must be checked by the persons who market the machines.

The building electrical system must comply with IEC 364. For increased safety the device should be protected by an earth-leakage circuit breaker with 30 mA rated fault current (EN 61008).

A standard electrical outlet compliant with EN 60309 must be installed near the device or 30 cm below the top of the counter at the back or side of the undercounter structure for a single-phase connection. If the power connection cord of this device has been damaged, it must be replaced by our customer service or by a similarly qualified person. The power cord must not be in contact with hot objects. The electrical outlet is part of the building installation. The machine must not be installed with a fixed building connection when used with a trolley (mobile station).